

Note: Casing #s in Blue – Bigger above sea level subsea casing #s to surrounding data points must be honored vice versa smaller above sea level subsea casing #s to surrounding data points do not have to be honored. All casing point #s have 50 feet added to them.

Water well data points denoted with ww and are total depth as reported used only when well control lacking.

W A G O N E R C O U N T Y


W A S H I N G T O N C O U N T Y

R O G E R S C O U N T Y

O S A G E C O U N T Y

C R E E K C O U N T Y

O K M U L G E C O U N T Y

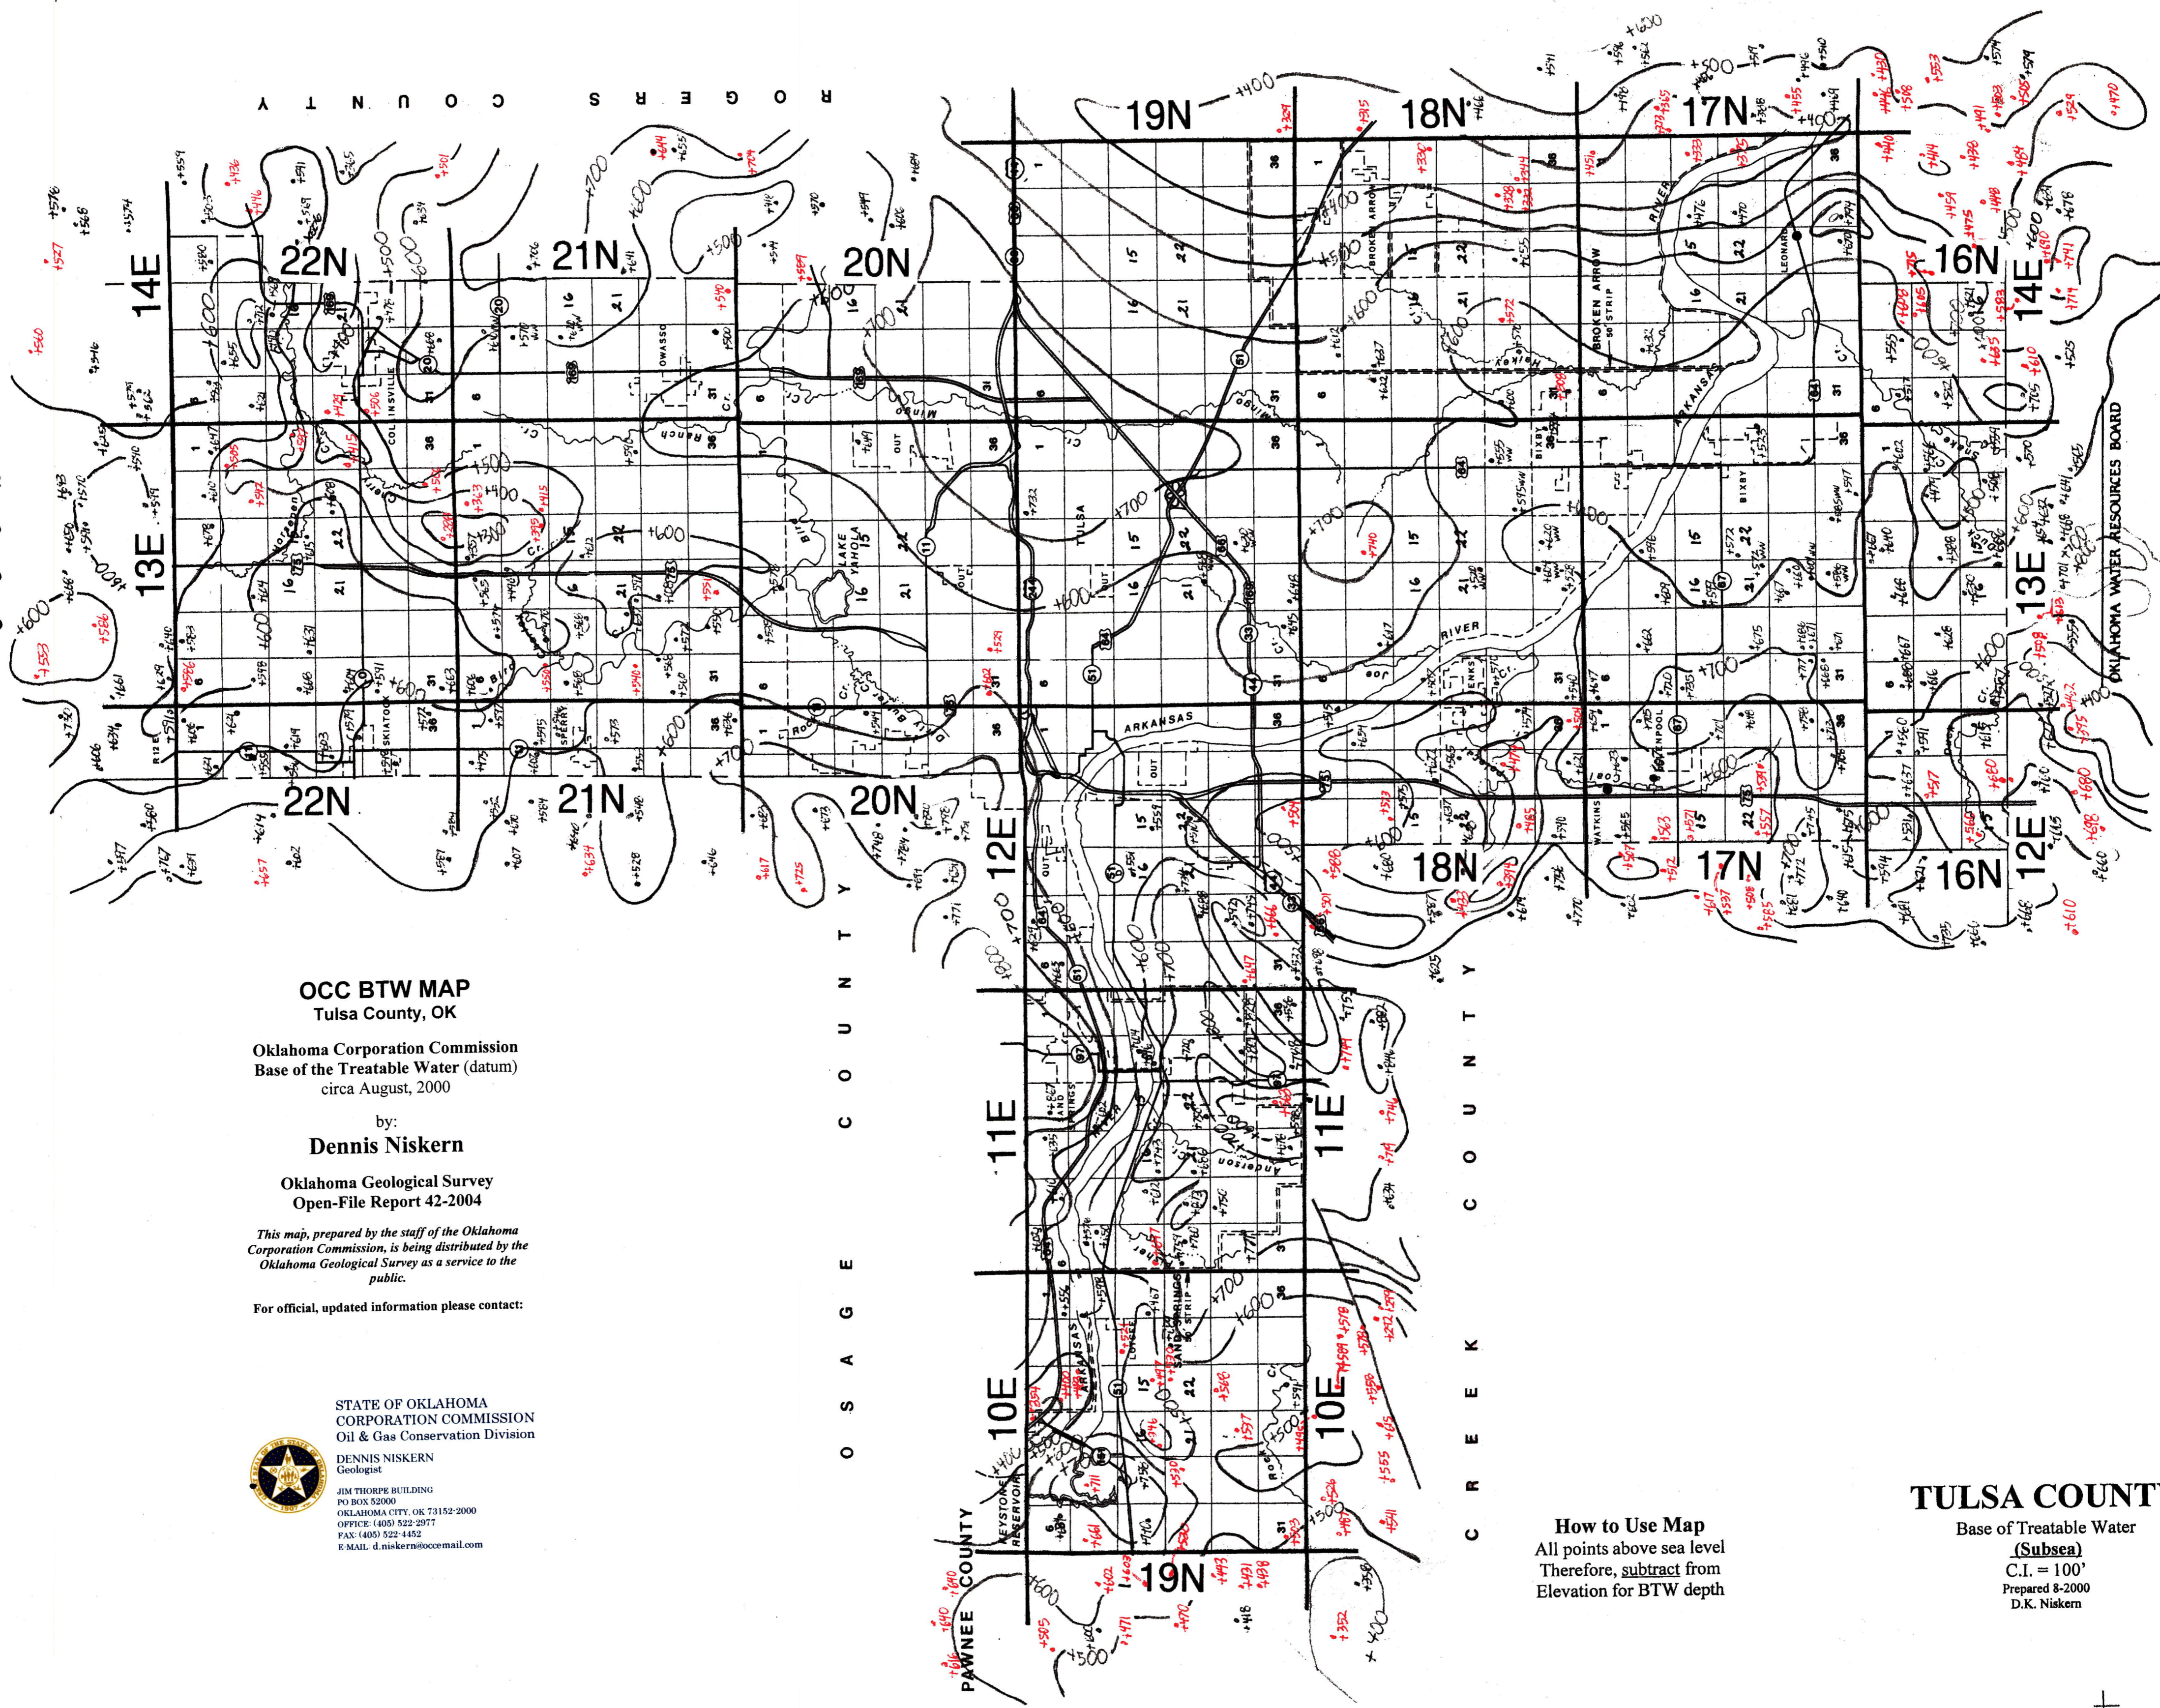

OCC BTW MAP
Tulsa County, OK

Oklahoma Corporation Commission
Base of the Treatable Water (datum)
circa August, 2000

by:
Dennis Niskern

Oklahoma Geological Survey
Open-File Report 42-2004

This map, prepared by the staff of the Oklahoma Corporation Commission, is being distributed by the Oklahoma Geological Survey as a service to the public.

For official, updated information please contact:

STATE OF OKLAHOMA
CORPORATION COMMISSION
Oil & Gas Conservation Division
DENNIS NISKERN
Geologist
JIM THORPE BUILDING
PO BOX 52000
OKLAHOMA CITY, OK 73152-2000
OFFICE: (405) 522-2977
FAX: (405) 522-4452
E-MAIL: d.niskern@occcmail.com



TULSA COUNTY
Base of Treatable Water
(Subsea)
C.I. = 100'
Prepared 8-2000
D.K. Niskern

How to Use Map
All points above sea level
Therefore, subtract from
Elevation for BTW depth

TULSA